



**Tools Required For Installation**

- 10mm Deep Socket
- 4mm, 5/16" Sockets
- 5/32" Allen Wrench

**Installation Instructions**  
**Part Number 200-617**  
**Poweraid Spacer For 2007-2010**  
**Chevrolet Silverado 1500**  
**Tahoe/Suburban/Avalanche**  
**GMC Sierra 1500**  
**Yukon/Yukon XL/**  
**Denali/ Denali XT**  
**Cadillac Escalade/ESV/EXT**  
**4.8L, 5.3L, 6.0L, 6.2L**  
**GMT-900 Series Trucks & SUVs**

**Parts List**

#1	Poweraid Spacer	x1
#2	6mmx70mm Bolts	x4
#3	6mm Flat Washers	x4
#4	Fiber Gasket	x1
#5	1" Extension Plate	x1
#6	6mm Flat Head Bolt	x1

*The C.A.R.B. E. O. Exemption for this throttlebody kit includes all models listed above up to and including 2009 models. All other listed applications are pending.*


**Note: Poweraid Spacer part #200-617 DOES NOT fit GM 2500/3500 trucks with mechanical fan. Use Poweraid Spacer part # 200-606 for GM 2500/3500 trucks.**



1. **Disconnect the negative battery cable!**  
 Lift up on the front of the hood and beauty cover and remove it from the vehicle. Push down on the radiator hose, and separate the tube from the plastic clamp.




2. Disconnect the breather tube from the intake tube, by gently pulling towards you. An O-ring is all that holds it in place. Next loosen the hose clamp on the intake tube at the throttle body, and at the Mass Air Sensor, and remove the tube from the vehicle.

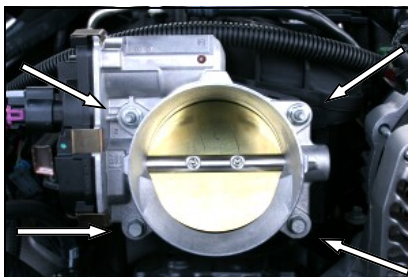


3. With a 10mm socket remove the two nuts, and the two bolts that hold the throttle body to the intake manifold. Without disconnecting the wiring harness, set the throttle body aside.



4. Using a 4mm socket, remove the two studs that held the throttle body to the intake manifold.

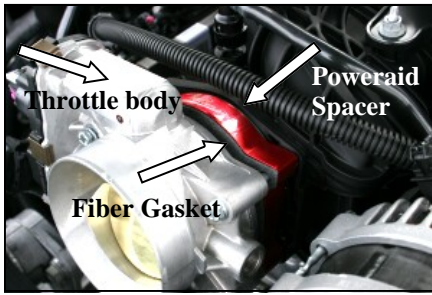

5. Install 2 of the supplied bolts (#2) and washers (#3) thru the two holes in the top of the throttle body, thru the supplied fiber gasket (#4), thru the Poweraid Spacer, and into the two brass inserts in the intake manifold. Run the bolts in a few threads with your fingers. Use caution not to cross-thread the bolts. Next install the 2 remaining bolts (#2) and washers (#3) in the two bottom holes of the throttle body, and tighten in a cross pattern to the vehicle manufacturer's specifications.

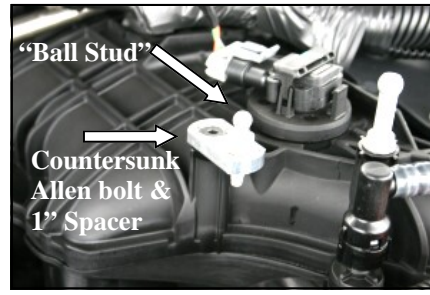


6. Remove the "ball stud" from the top of the intake manifold, insert the countersunk Allen bolt (#6) thru the countersunk hole in the provided 1" spacer plate (#5). Thread the countersunk bolt into the hole where you removed the "ball stud", face the spacer towards the front of the vehicle, and tighten the countersunk Allen bolt. Next thread the "ball stud" into the forward hole in the 1" spacer and tighten.



7. Remove the factory grommet from the intake tube.



8. Install the grommet from step #7 on the "ball stud", with the small diameter facing up as shown.

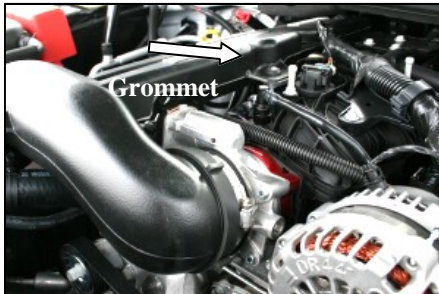

9. Re-install the intake tube using caution to center the intake tube hole over the previously installed grommet. Some adjustment may be required to seat the grommet correctly back into the intake tube. Tighten the hose clamps on the tube. Re-connect the breather tube. Re-install the plastic holder from step #1. Re-install the beauty cover. **Re-connect the negative battery cable!**

Thank you for purchasing the Poweraid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your Poweraid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.



Included with your Poweraid Spacer is a sticker with a California Air Resources Board (C.A.R.B.) Executive Order (EO) number. This sticker must be placed in plain view inside of the engine compartment. Failure to do so may prevent you from passing a smog inspection.

*The sound of power... The "whistle" means its working!*

Contact your nearest Airaid dealer for an Airaid Intake System for your car, truck or SUV.

Instructions Revision  
12/14/09

AIRAIID Filter Co. 2688 E Rose Garden Ln. Phoenix AZ 85050 (800) 498-6951 Airaidinfo@airaid.com www.airaid.com