

AIR RAID®

INTAKE SYSTEMS

P/N 201-108 Installation Instructions
1996-2005 GM 4.3I S-10 Blazer/GMC Jimmy
1996-2004 4.3I Chevrolet S-10/GMC Sonoma
1997-2000 4.3I Isuzu Hombre
1991-2001 4.3I Oldsmobile Bravada

Thank you for purchasing the Airaid Intake System. Please read the instruction manual carefully before proceeding with the installation. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILITY! The air filter is reusable and should be cleaned using the Airaid Filter Tune-Up Kit periodically.

Thank you for selecting Airaid.



Packing List:

701-430	Airaid Premium Filter	1
KIT108TAC	Airaid Intake Tube	1
KITTWP33	Stainless Coupler	1
KIT108HPS	Hardware Pack	1
- Instructions Sheet		x1

Tools Required for this Installation:

Nut Driver
10mm Socket
5/16" Socket
Flat Head Screwdriver

Installation Instructions. Read Me!

I) DISCONNECT NEGATIVE (-) BATTERY CABLE.

II) Remove the Factory Air Filter Housing.

- a) Unscrew the air cleaner housing lid from the base.
- b) Loosen the rubber clamp to the mass air flow meter and remove from vehicle. **See Fig#1**
- c) Remove the factory air filter from the vehicle. **See Fig#1**
- d) Remove the air filter housing base by removing the one nut on the corner of the housing. Then lift the housing out from the rear to remove.

III) Install the Airaid Intake Tube.

- a) Mount the 3.5" stainless steel coupler onto the long end of the Airaid intake Tube.
- b) Slide the tube with coupler onto the mass airflow meter. (*Note: the coupler is a reducer, the smaller end of the coupler mounts onto the meter.*)
- c) Install the Airaid premium air filter to onto the short end of the intake tube and tighten hose clamp.
- d) Slide the Airaid intake tube with coupler over the mass air meter and align bracket with the factory stud. **See Fig#2**
- e) Use the original 10mm nut to fasten the Airaid bracket to the factory stud. **See Fig#2**
- f) Carefully tighten the stainless coupler in alternating steps.

IV) Finishing Up

- a) Check for any foreign objects or debris in the intake path.
- b) Reconnect the negative battery cable & double check your work.

Figure #1

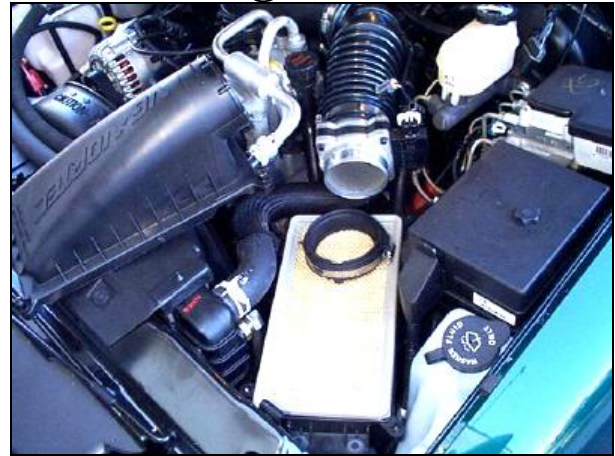


Figure #2



Synthamax Air Filters do not require oil. Service air filter as needed by cleaning with common non-petroleum all-purpose household cleaner and water. Simple Green®, Formula 409® or equivalent works great. Apply cleaner to outside of air filter and allow to soak. Then flush filter clean from the inside out with a garden hose and repeat steps if necessary. Do not apply high pressure water or air to clean filter. Allow filter to air dry and reinstall.

REV 10/25/10

SynthaMax®

Do Not Oil