



Installation Instructions
Part Number 300-631
2009 Chrysler Aspen
2009 Dodge Durango
2009-2010 Dodge Ram
5.7L



Parts List

#1	Poweraid Spacer	x1
#2	6mmx63mm Bolt	x4
#3	6mm Flat Washer	x4
#4	O-Ring	x1

Tools Required For Installation

5/16", 10mm Socket
 Ratchet and Extension

The C.A.R.B. E.O. number for this part number includes the vehicles listed above thru the 2009 model year. All others are pending.

Thank you for purchasing the Poweraid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your Poweraid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.

Included with your Airaid Intake System is a sticker with a California Air Resources Board (C.A.R.B.) Executive Order (EO) number. This sticker must be placed in plain view inside of the engine compartment. Failure to do so may prevent you from passing a smog inspection.




1. Disconnect the negative battery cable!

Disconnect the air intake temperature sensor wiring harness by sliding the red tab, and then squeezing the black tab. Loosen two hose clamps, one on each end of the flexible air intake tube. Remove the tube from the vehicle. Lift straight up on the front of engine beauty cover, pull it towards you, and set it aside.



2. Remove the four bolts that secure the throttlebody to the intake manifold. Without disconnecting the wiring harness, remove the throttlebody from the intake manifold and set it aside.

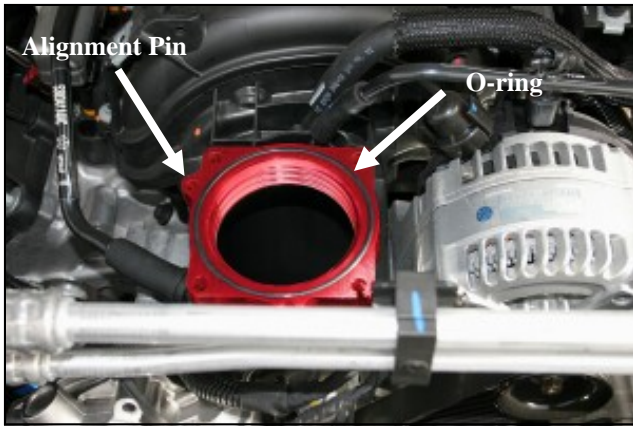

3. Install the supplied o-ring into the groove on the Poweraid Spacer. Next install the spacer onto the intake manifold with the o-ring facing up, making sure that the alignment pin holes are located over the alignment pins.



4. Reinstall the throttlebody on top of the Poweraid Spacer using the four bolts and washers that are supplied with the kit. Tighten the bolts evenly to the vehicle manufacturers specifications.



5. Reinstall the engine beauty cover and intake tube in the reverse order that they were removed. Make sure to reconnect the temperature sensor.

Re-connect the negative battery cable!



The sound of power...The "whistle" means its working!

Contact your nearest Airaid dealer for an Airaid Intake System for your car, truck or SUV.

Instructions Revision
12/08/09

AIRAID Filter Co. 2688 E Rose Garden Ln. Phoenix AZ 85050 (800) 498-6951 Airaidinfo@airaid.com www.airaid.com