



**# 350-532 INSTALLATION INSTRUCTIONS**  
**2005-08 Dodge Magnum 5.7L/6.1L SRT-8**  
**2005-10 Chrysler 300C 5.7L/(6.1L up to 2009)**  
**2006-11 Dodge Charger 5.7L/(6.1L up to 2009)**  
**2006-09 Jeep Grand Cherokee 6.1L SRT-8**  
**2008-11 Dodge Challenger 5.7L/(6.1L up to 2009)**  
**Does not fit SRT-8 6.1L for 2010**

**Please Note:** The 2009 Jeep Grand Cherokee and all 2010 –11 models listed above are not included in the C.A.R.B. E.O. number at this time. They are

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.

*Thank you for selecting AIRAID.*



**Also available for your Dodge Magnum, Challenger, Chrysler 300C , Dodge Charger, or Jeep Cherokee, the Airaid Intake System. Call for Details!**

**Parts List**

- 1- Power Plate
- 1- "O" Ring
- 4- 6mm x 60mm Bolts
- 4- 6mm Flat Washers
- 4- 51mm Screws (Black)

**Tool List**


- 8mm Socket
- 10mm Socket
- Ratchet

## ***Installation Instructions. Read Me!***

1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**
2. Remove air intake assembly.
3. Remove the original (4) bolts from the throttle body.
4. **2005-08 All Models & 2009-10 6.1L:** Install power plate using supplied (4) 6mm x 60mm bolts and (4) 6mm flat washers. **2009-10 5.7L Models: Use (4) 51mm Black Screws (Ref. "B") (The 51mm black screws are not compatible with metal threaded intake manifolds.)**
5. Inspect & Test throttle linkage for full Open & Closed travel before driving. Some cruise or kickdown cables may require adjustment, Please refer to your vehicles service manual.
6. Reinstall the throttle body air intake assembly using **Step 2** as an example.
7. Reconnect negative battery cable. Enjoy!

Included with your Poweraid Spacer is a sticker with a California Air Resources Board (C.A.R.B.) Executive Order (E.O.) number. This sticker must be placed in plain view inside of the engine compartment. Failure to do so may prevent you from passing a smog inspection.

**Ref. "A"**- (1) Power Plate  
(1) "O"-Ring

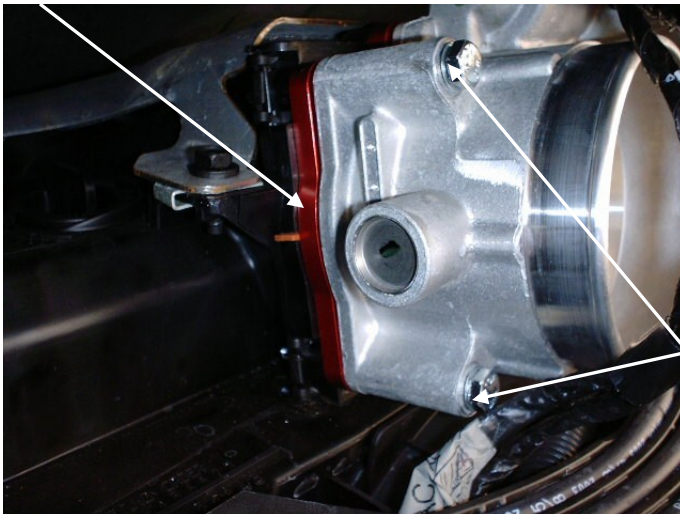

**Ref. "B"**- (4) 6mm x 60mm Bolts  
(4) 6mm Washers  
**2009-10 Models Use:**  
(4) 51mm Black Screws