



## Installation Instructions

Part Number 510-621

Poweraid Spacer For

2007-11 Toyota Tundra

2008-11 Toyota Sequoia

5.7L V-8

2010-11 Toyota Tundra

2010-11 Toyota Sequoia

4.6L V-8

### Parts List

#1	Poweraid Spacer	x1
#2	Gasket	x1
#3	6mm x 65mm Hex Bolts	x4
#4	6mm Flat Washers	x4

### Tools Required For Installation

Flat Blade Screwdriver

10mm Socket

Ratchet & Extension

Pliers

*The C.A.R.B. E. O. Exemption for this Poweraid Spacer does not include the 2010 Toyota Tundra or Sequoia at this time.*

Thank you for purchasing the Poweraid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your Poweraid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.

*Thank you for selecting AIRAID.*




#### **1. Disconnect the negative battery cable!**


Remove the engine beauty cover by lifting up on the front, and then pulling it towards the front of the vehicle. (Save for reuse).




2. Using a 10mm socket, loosen two hose clamps on the factory intake tube. Slide the factory intake tube off of the throttle body and airbox. Move the factory intake tube aside, while leaving the factory vacuum and breather lines connected .

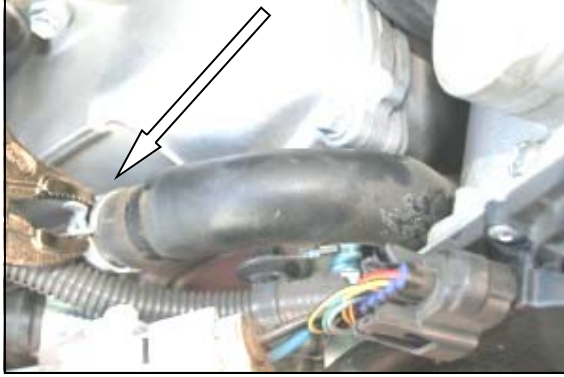

3. Using pliers, squeeze the tabs on the coolant hose clamp together. Slide the hose and clamp towards the passenger side approximately one half inch.

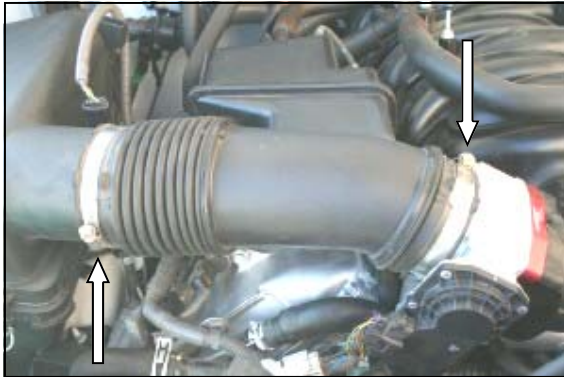

5. Re-install the factory intake tube and tighten the hose clamps securely.

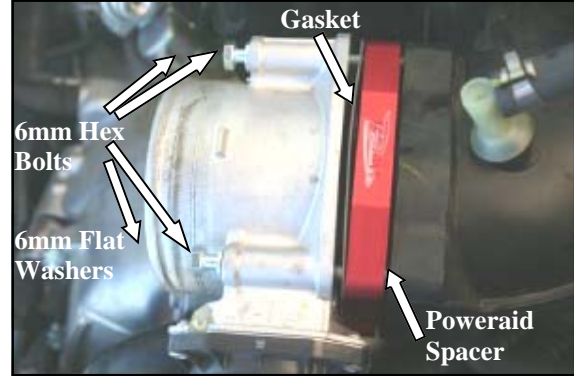

4. Using a 10mm socket, remove the four factory bolts on the throttle body. Gently move the throttle body towards the passenger side of the vehicle. Slide the Poweraid Spacer (#1) and gasket (#2) between the throttle body and intake manifold. Insert four 6mm x 65mm hex bolts (#3), and 6mm flat washers (#4) thru the throttle body, gasket, Poweraid Spacer, and into the intake manifold. Using a 10mm socket, tighten all four throttle body bolts evenly, to the manufacturers specifications. **Do Not Over Tighten The Bolts!**

6. Re-install the engine beauty cover.  
**Reconnect the negative battery cable!**

*The sound of power...The "whistle" means its working!*

Included with your Poweraid Spacer is a sticker with a California Air Resources Board (C.A.R.B.) Executive Order (EO) number. This sticker must be placed in plain view inside of the engine compartment. Failure to do so may prevent you from passing a smog inspection.

Contact your nearest Airaid dealer for an Airaid Intake System for your car, truck or SUV.



Instructions Revision  
12/02/10