



**Installation Instructions**  
**Part Number 350-635**  
**2010 Dodge Challenger,**  
**Charger, Chrysler 300C,**  
**Jeep Cherokee SRT-8**  
**6.1L ENGINE ONLY**



**Parts List**

AIR-KIT635PA Aluminum Plate	(1)
AIR-KIT635H Hardware	
O-Ring	(1)
6mm x 60mm Hex Bolts	(4)
6mm Flat Washers	(4)

**Tools Required For Installation**



5/16" & 10mm Sockets  
Ratchet & Extension

**NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.**

See AIRAID.COM for CARB status on each part for a specific vehicle.


Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

*Thank you for selecting AIRAID.*

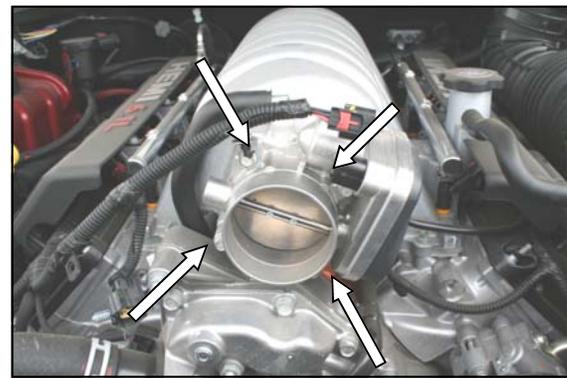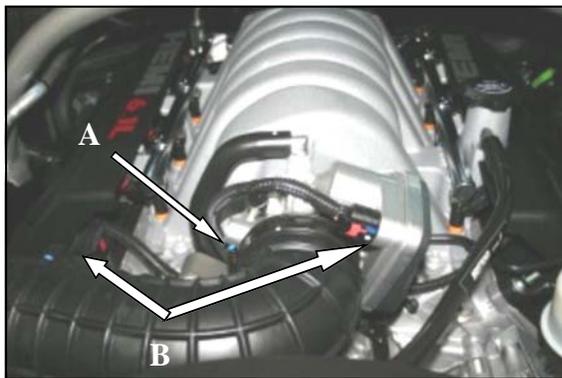

1. **Disconnect the negative battery cable!**  
A) Using a 5/16" socket, loosen the hose clamp on the throttle body end of the factory intake tube. Move the factory intake tube up and out of the way of the throttle body. B) Disconnect the throttle body motor harness and the air temperature sensor.

2. Using a 10mm Socket, remove the 4 bolts that hold the throttle body to the intake manifold.

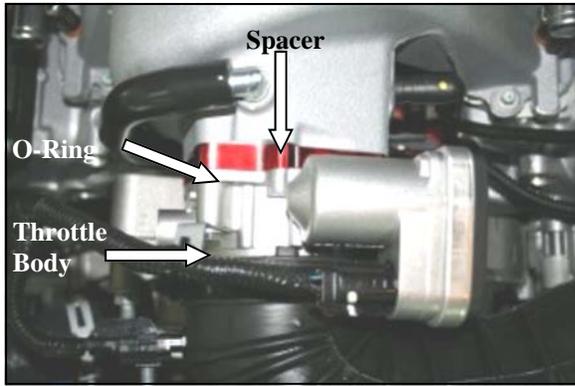

3. Install the O-Ring (#2) into the groove on the Poweraid Spacer (#1). Install the spacer between the intake manifold, and the throttle body with the O-Ring facing the throttle body. Insert four 6mm x 60mm Hex Bolts (#3), and 6mm Flat Washers (#4) through the throttle body, Poweraid Spacer, and into the intake manifold. Using a 10mm socket, tighten all 4 throttle body bolts evenly, to the manufacturer's specifications.

**Do Not Over Tighten The Bolts!**



4. Reinstall the factory intake tube, and tighten the hose clamp. Reconnect the Air temperature sensor and throttle body motor. **Re-connect the negative battery cable!**

*The sound of power...The "whistle" means its working!*

Contact your nearest Airaid dealer for an Airaid Intake System for your car, truck or SUV.



AIR-I35635B  
Rev. 12.22.16